

SWR 100

SWR - Meter

OPERATING INSTRUCTION:

- 1) With your transceiver turned off, connect a coaxial cable from the transceiver to the „TX” plug of the SWR-meter, and also connect the antenna cable to the “ANT” plug of the same measuring instrument.
 - 2) To measure SWR set function switch to the “FWD” position, switch on the C.B. unit to transmit. Adjust the “CAL” control to achieve a full scale reading at the “SET” mark.
 - 3) Set function switch to the “REF” position, now the reflected power will be indicated in SWR ratio from the top scale of the meter.
- Always try to tune your antenna to a minimum meter deflection in the “REF” position.

WARNING:

- 1) Under output power of transmitter “ON” don’t take off coaxial cable towards the antenna. Excess voltage may damage the transceiver.
- 2) Don’t cause excessive shock on meter, because it is integrated with a high sensitive meter.

SPECIFICATIONS:

S.W.R.....1: - 1:3
Frequency range.....1.5 – 150 MHz
Impedance.....52 Ohm
Accuracy.....+5%
Max. power.....,100W