

# **Alltrucker 1.8L Electric Food Warmer Box – User Manual**

## **SPECIFICATIONS**

**Capacity: 1.8L (Large compartment: 0.5L, Small compartment: 0.45L)**

**Voltage: 12V / 24V / 110V / 220V**

**Power: 50W**

## **HOW TO USE – HEATING FOOD**

**Place food into one of the compartments.**

**Close the box and secure the lid.**

**Open the protective connector cover on the box.**

**DC and AC connectors are not interchangeable.**

**First connect the plug to the box, then plug into the power outlet and press the ON button.**

**Heating speed depends on the type and quantity of food.**

**Before eating directly from the lunch box, unplug it from the power supply.**

## **TIPS FOR HEATING RICE**

**If rice has been stored for a long time, add a little water before reheating to make it softer.**

## **SPECIAL NOTE**

**Before heating food, open the steam vent on the lid. Failure to do so may cause permanent damage to the lunch box.**

## **SAFETY PRECAUTIONS**

**Ensure product specifications match your needs.**

**Replace the power cable if damaged.**

**Do not use near flammable materials.**

**Do not plug in or unplug with wet hands.**

**Do not immerse the box in water — risk of damage.**

**Do not modify or repair the product yourself.**

**Do not use on uneven or wet surfaces.**

**Do not sterilize with hot air or pressure sterilization.**

**Do not heat the box in a microwave.**

**Do not freeze the box or store it in a refrigerator.**

**Do not turn on the box without food inside.**

## **CLEANING AND MAINTENANCE**

**Always close the connector cover before cleaning.**

**Clean the lunch box promptly to prevent damage to the compartments.**

**Do not use thinner, harsh cleaners, hard brushes, steel wool, or similar abrasives.**

**Use a soft sponge instead. Use warm water and a soft, damp cloth for cleaning.**

**If not used for a long time, store the lunch box in its box in a dry, well-ventilated place.**