


Ohřívací jídelní box

altrucker

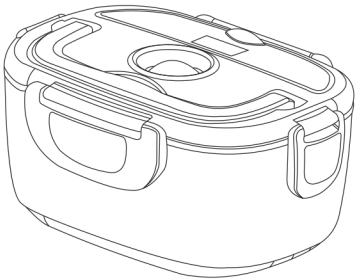


Napájecí napětí	Výkon
12V ~ 24V	40W

Úvodní informace o výrobku

Děkujeme, že jste si zakoupili elektrický obědový box.
Před použitím obědového boxu si prosím přečtěte tento návod.
Po přečtení je třeba jej uschovat pro budoucí použití!

Popis produktu

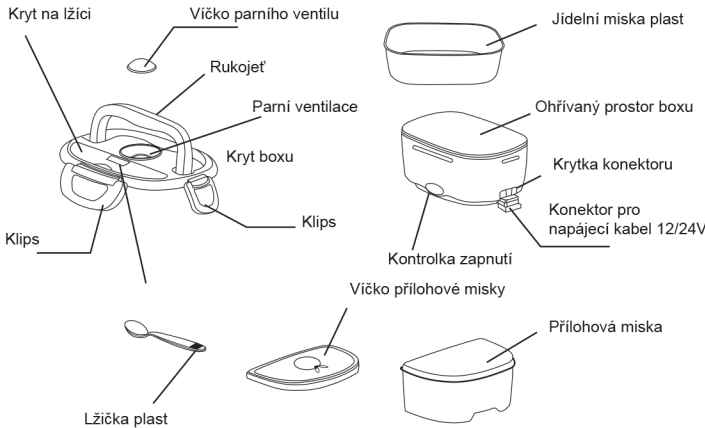

(A)Ohřev potravin

1. Uvařené jídlo vložte do plastové misky na jídlo.Přiklopte víčkem a zajistěte klipsy.
2. Do napájecího konektoru zasuňte napájecí kabel 12/24V.
3. Zasuňte konektor autozapalovače do zásuvky 12 nebo 24V.

Upozornění: Doba ohřevu závisí na množství ohřívaného pokrmu a teplotě vnitřního prostoru.


- (1) Na ohřev potravin stačí 25 minut při okolní teplotě 25 stupňů Celsia.
- (2) Pro potraviny přímo z chladničky, by doba ohřevu měla být přiměřeně prodloužena.
- (3) Před konzumací jídla vytáhněte napájecí kabel.

Čištění a údržba

1. Po ukončení ohřevu nezapomeňte vytáhnout zástrčku ze zásuvky.
2. Plastový box čistěte vždy včas, aby se zabránilo vzniku zápachu.
3. Na čištění nádoby a přístroje nikdy nepoužívejte ředidla, tvrdý kartáč, nebo kovové houbičky.
4. K čištění můžete použít teplou vodu s jarem nebo měkký a vlhký hadřík.
5. Pokud se vyskytnou jakékoli problémy s ohřívacím boxem, zašlete jej prodejci k opravě. Neopravujte ohřívací box nikdy sami.

Electric Lunch BOX

altrucker

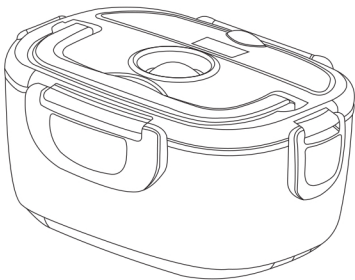


Voltage	Power
12V ~ 24V	40W

Thanks for purchasing Electric Lunch Box.Please read this manual before using the lunch box.After reading should be kept for future reference!

Product Introduction

Thank you for using our Electric Lunch Box.We independently research and produce this product which is novel and fashionable .Our product is of high utility,It's to your convenience.

Product Structure

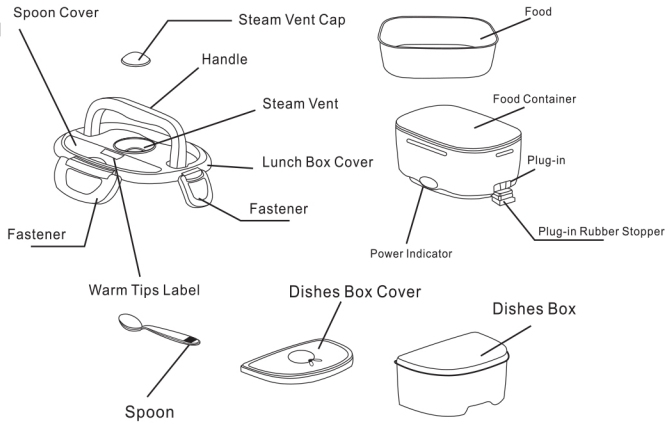

Method of use

(A) Heating food

- 1.Please put the cooked food into the rice container and the dishes container.
- 2.Please fasten the lip.
- 3.Open the socket shopper,insert the power cord.
- 4.Switch on the power,the power indicator light,plus soup began.

Note:Heating time depends on the amount of rice,vegetables, and the indoor temperature.

- (1)Heating food just need 25 minutes on the condition of 25 degrees centigrade.
- (2)When the food get from the fridge,the heating time should be extension appropriate.
- (3)Please pull out the power cord before eating.

Clean & maintenance

- 1.Don't forget to pull the plug out when you finish heating.
- 2.Please clean in in time to prevent generation of peculiar smell
- 3.Do not use thinner,dasoline,cleanser,hard brush,or stainless steel wire clean ball to clean.
4. You can use a few of warm water or soft and wet cloth to clean it.
- 5.If there exists any problems with the lunch box,please sent it to our designated maintenance service department to repair,Do not repair it by yourself.